
ASSEMBLY INSTRUCTION

ALLEN BOLT H1 X 12	WASHER H2 X 12	ALLEN KEY H3 X 1	**Code :3009/15D**

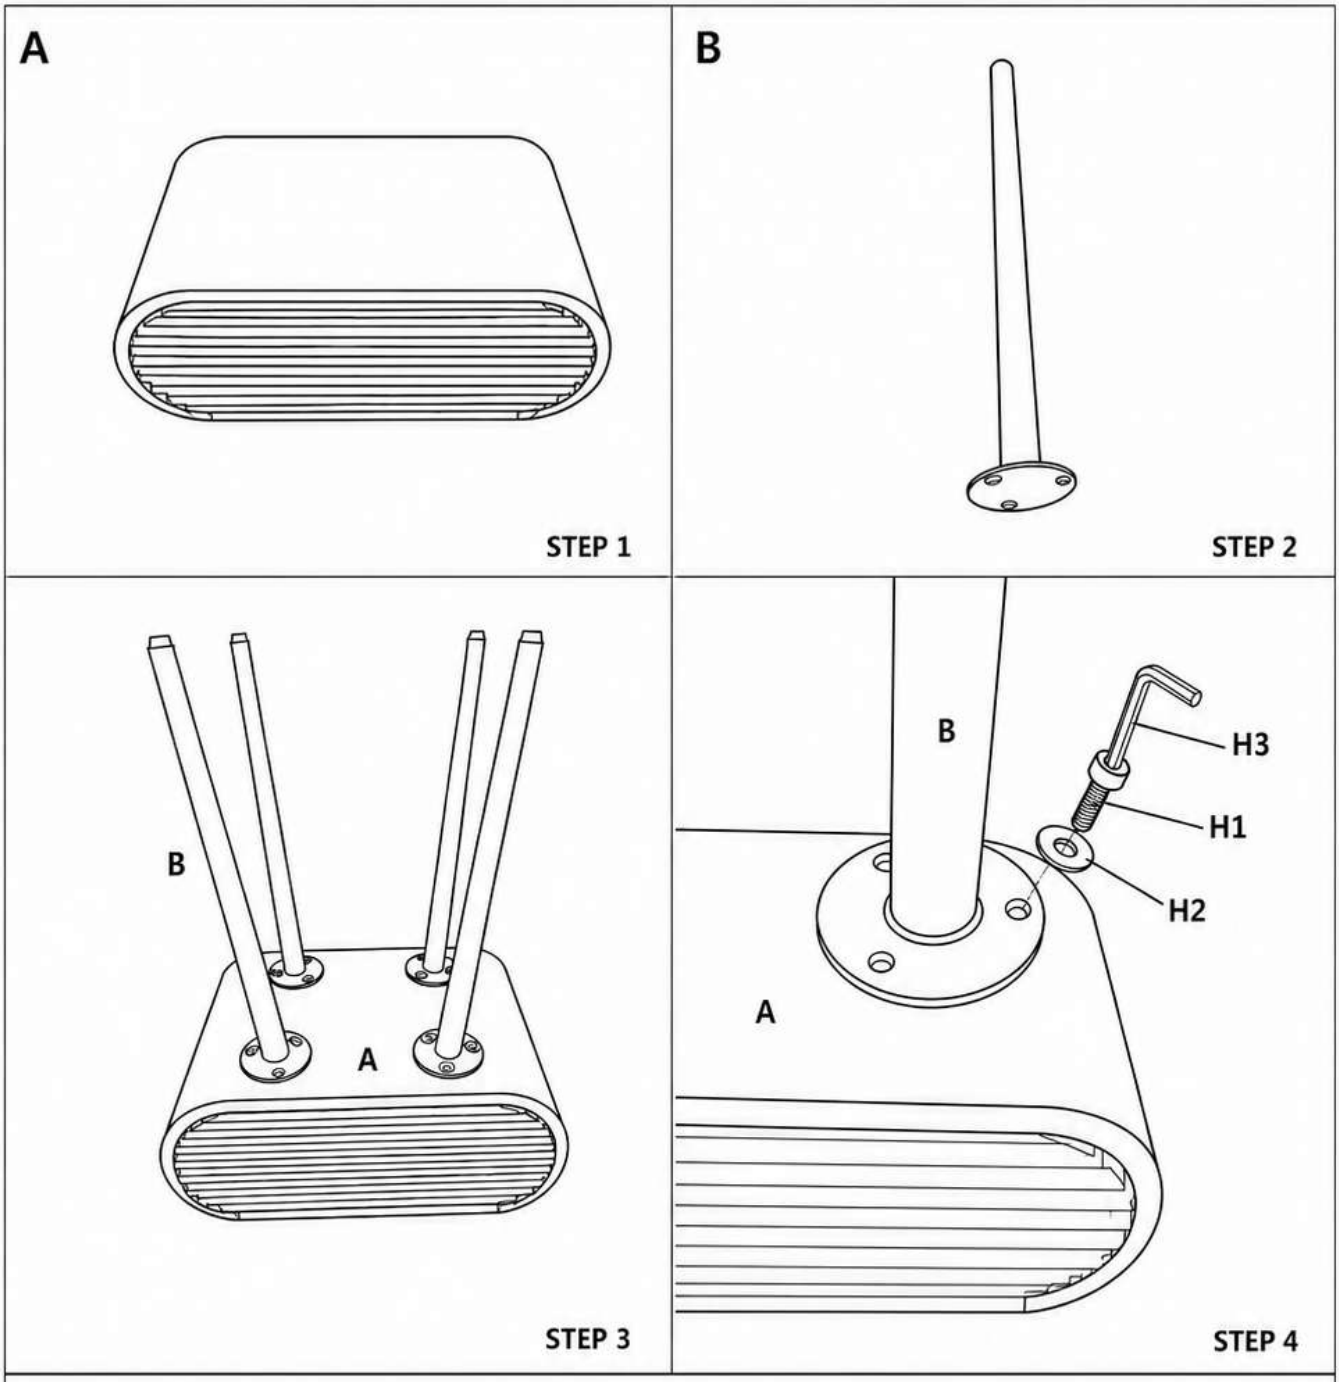

STEPS:

1. Place the wooden top (A) on a soft surface.
2. Take one leg (B) with the mounting plate.
3. Align the leg (B) with one of the mounting holes on the top (A).
4. Insert the allen bolt (H1) through the washer (H2) and into the mounting hole. Tighten it using the allen key (H3).
5. Repeat the same process for the remaining three legs.
6. Ensure all bolts are properly tightened.

YOUR ITEM IS READY TO USE.